

Lightversion:

1. Installation of the demo version
2. Open the sample project via File > Open/Create a project
3. Choose the menu option Extras > Other > Enable program functions
4. Type "LE" or "LITE" as command
5. A dialog appears, containing a LE number and an empty field for the "Release Code"
6. Search the internet address <<http://www.WinPLC7.com/LE.htm>>. With the LE number, you'll get an according release code per mail.
7. After input of the release code and a reboot of WinPLC7, the LE version is active.

Vollversion:

You need the following things to activate WinPLC7:

1. A demo version of WinPLC7
2. A serial number (35 digit) of WinPLC7.
You have got the serial number at the purchase of the software.
3. An internet connection and a valid mail address.

Installation of WinPLC7

1. Install the demo version
2. Open the example-project with menu item File->Open/Create a project
3. Choose the menu item "Extras->Others->Enable program functions".
4. Type in "enable" as password.
5. It appears the dialog "Activating program".
The SYS number is displayed in the second field.
Press the button "Copy into clipboard", which is right of the field.
6. Establish a connection to the internet.
7. Visit the site: www.WinPLC7.com/enable/F_GetKeyForm.HTM
8. Click with the mouse to the field "System number" and then press CTRL+V to insert the system number.
9. Type in the serial number (35-digit) into the field "serial number".
If you have stored the serial number in a file, you should insert the number via copy and paste to avoid writing mistakes.
10. Type in your email address into the field email address.
11. Type in your name into the field "Your name"

After you filled out all fields press the button "Send".

A valid activation key will be sent to the given email address.

After you received the activation key, open the dialog "Activating program" again (see 5.)

Insert the activation key into the third field. Insert the serial number into the first field.

Press the button "OK".

Close the program and open it again. Then the software is activated.

Note:

You can request an activation code over this form up to 10 times.

Please, don't pass the serial number on. Otherwise you can request no more activation code.

If you have further questions to this process, send a email to: info@WinPLC7.com.

You can write in german or english language.