

## How to do

### Installation instruction of the WINPLC7 Lite-Version



Requirements for the installation:

System software Windows 98/ME/2000/XP/NT 4.x

Installation CD-ROM

Valid email address

#### Instruction:

1. Please install WinPLC7 by activation of WS7V3.EXE from the provided CD-ROM. Alternatively, you can download the actual software here:  
<http://www.winplc7.com/v3/vipa/ws7v3.exe>
2. After the installation of the software, the demo version is activated at first. With the following steps you can switch the demo version to a lite version (only for System 100V).
3. Please activate WinPLC7
4. Please open the example project via "**File** -> *Open/Create project*"
5. Then please select the menu item "**Extra** -> *Other* -> *Enable program functions*". A dialog appears; for the LITE-version please enter "LE" or "LITE" and confirm with "OK".
6. A further window appears with a LITE-number and an empty input box for the release code.
7. Please copy the LITE-number
8. Search the activation site in the internet under <http://www.winplc7.com/le.htm>
9. Please enter the LITE-number into the corresponding box and complete the other boxes including email address as well. Then, please click the button "send". You should receive the release code via email shortly.
10. Copy the code into the empty input box (from point 6) and confirm
11. After a reboot of WinPLC7, the LE-version is active.